

Single-Phase SSR With Integrated Heatsink
[Voltage Input Type]

SRH1 Series
INSTRUCTION MANUAL

TCD250023AB

Autonics

Thank you for choosing our Autonics product.

Read and understand the instruction manual and manual thoroughly before using the product.

For your safety, read and follow the below safety considerations before using.

For your safety, read and follow the considerations written in the instruction manual, other manuals and Autonics website.

Keep this instruction manual in a place where you can find easily.



Visit Autonics website (www.autonics.com or QR code) for the latest information. Manuals, CAD files, certifications, software, etc. are available. The dimensions, specifications, certifications, etc. are subject to change without notice for product improvement. Certain models may be discontinued without notice.

Safety Considerations

- Observe all ‘Safety Considerations’ for safe and proper operation to avoid hazards.
- ⚠ symbol indicates caution due to special circumstances in which hazards may occur.

⚠ Warning Failure to follow instructions may result in serious injury or death.

- Fail-safe device must be installed when using the unit with machinery that may cause serious injury or substantial economic loss.**(e.g., nuclear power control, medical equipment, ships, vehicles, railways, aircraft, combustion apparatus, safety equipment, crime/disaster prevention devices, etc.)
Failure to follow this instruction may result in personal injury, economic loss or fire.
- Do not use or store the unit in the place where flammable/explosive/ corrosive gas, high humidity, direct sunlight, radiant heat, vibration, impact or salinity may be present.**
Failure to follow this instruction may result in explosion or fire.
- Install the device on DIN rail or in panel to use.**
Failure to follow this instruction may result in fire or electric shock.
- Do not connect, repair, or inspect the unit while connected to a power source.**
Failure to follow this instruction may result in fire or electric shock.
- Check ‘Connections’ before wiring.**
Failure to follow this instruction may result in fire.
- Do not disassemble or modify the unit.**
Failure to follow this instruction may result in fire or electric shock.

⚠ Caution Failure to follow instructions may result in injury or product damage.

- Use the unit within the rated specifications.**
Failure to follow this instruction may result in fire or product damage.
- Use a dry cloth to clean the unit, and do not use water or organic solvent.**
Failure to follow this instruction may result in fire or electric shock.
- Keep the product away from metal chip, dust, and wire residue which flow into the unit.**
Failure to follow this instruction may result in fire or product damage.
- Since leakage current still flows right after turning off the power or in the output OFF status, do not touch the load terminal.**
Failure to follow this instruction may result in electric shock.

Cautions during Use

- Follow instructions in ‘Cautions during Use’. Otherwise, it may cause unexpected accidents.
- 4 - 30 VDC≡, 24 VAC~ model power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- Install the unit in the well ventilated place. If the area is poorly ventilated, install a cooling fan.
- Ground to the heatsink, inside the panel, or DIN rail. Failure to follow this instruction may result in electric shock.
- While supplying power to the load or right after turning off the power of the load, do not touch the body and heat sink. Failure to follow this instruction may result in burn due to high temperature of the surface.
- In order to protect the product from the short-circuit current of the load, use rapid fuse of which I²t is under the 1/2 of SSR I²t. When short-circuited, replace the fuse to those of same specification with the used rapid fuse.

- Install dummy resistance in parallel with the load, to keep the sum of current flowing in the load and dummy resistance being over SSR minimum load current.
- When using random turn-on model for phase control, install noise filter between the load and the power of the load.
- Do not use near the equipment which generates strong magnetic force or high frequency noise.
- This unit may be used in the following environments.
 - Indoors (in the environment condition rated in ‘Specifications’)
 - Altitude max. 2,000 m
 - Pollution degree 2
 - Installation category III

Ordering Information

This is only for reference, the actual product does not support all combinations. For selecting the specified model, follow the Autonics website.

SRH1	-	①	②	③	④
① Rated input voltage		1: 4 - 30 VDC		③ Rated load current	
		2: 24 VAC			Number: Rated load current (unit: A)
		4: 90 - 240 VAC			
② Rated load voltage		2: 24 - 240 VAC		④ Function	
		4: 48 - 480 VAC		No-mark: Zero cross turn-on	
				R: Random turn-on	


Product Components

- Product
- Instruction manual

Cautions during Installation

■ Spacing

- When installing multiple SSRs, be sure to keep space between SSRs for heat radiation.
- When installing SSRs horizontally (input part and output part on the same height), be sure to supply less than 50 % of the rated load current.

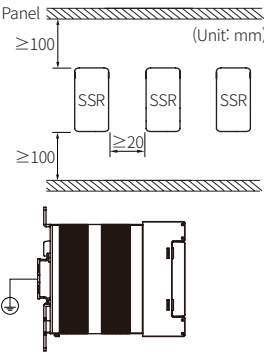

■ Grounding


- Ground the DIN rail.

Mounting

- It can be mounted on a 35 mm DIN rail conforming to EN 60715 standards.


■ Mounting with DIN Rail

Put the product on DIN rail and press it to the direction ①.

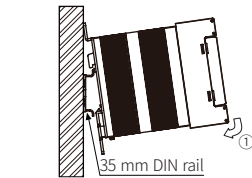

■ Removing with DIN Rail

Push the latch to the direction ① with a tool and pull the bottom of the device in the direction ②, then lift the product.

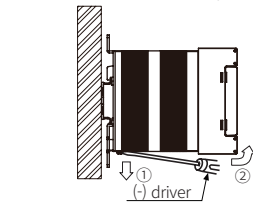

Crimp Terminal Specifications

- Unit: mm, When connecting the wire to the terminal, use the round crimp terminal. Use UL approved crimp terminals that meet the sizes below.

Size	Input	Output
Rated load current		10 / 15 / 20 A 30 / 40 / 60 A
a	≥ 3.5	≥ 4.0 ≥ 5.0
b	≤ 7.0	≤ 9.0 ≤ 12.0



Specifications

■ Input

Rated input voltage range	4 - 30 VDC≡	24 VAC~ (50 / 60 Hz)	90 - 240 VAC~ (50 / 60 Hz)
Allowable input voltage range	4 - 32 VDC≡	19 - 30 VAC~ (50 / 60 Hz)	85 - 264 VAC~ (50 / 60 Hz)
Max. input current	18 mA	15 mA	18 mA
Operating voltage	≥ 4 VDC≡	≥ 19 VAC~	≥ 85 VAC~
Releasing voltage	≤ 1 VDC≡	≤ 4 VAC~	≤ 10 VAC~
Operating time	Zero cross turn-on	≤ 0.5 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms
	Random turn-on	≤ 1 ms	-
Release time	≤ 0.5 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms	≤ 2 cycle of load power + 1 ms

■ Output

Rated load voltage range	24 - 240 VACrms~(50 / 60 Hz)						
Allowable load voltage range	24 - 264 VACrms~(50 / 60 Hz)						
Rated load current ⁰¹⁾	Resistive load (AC-1) ⁰²⁾	10 Arms	15 Arms	20 Arms	30 Arms	40 Arms	60 Arms
Min. load current	0.15 Arms	0.15 Arms	0.2 Arms	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms
Max. 1 cycle surge current (60 Hz)	160 A	160 A	250 A	400 A	800 A	1,000 A	
Max. non-repetitive surge current (I ² t, t = 8.3 ms)	128 A ² s	128 A ² s	340 A ² s	800 A ² s	3,000 A ² s	4,000 A ² s	
Peak voltage (non-repetitive)	600 V						
Leakage current (Ta = 25 °C)	≤ 10 mArms (240 VAC~/60 Hz)						
Output ON voltage drop [Vpk] (max. load current)	≤ 1.6 V						
Static off state dv/dt	500 V/μs						

Rated load voltage range	48 - 480 VACrms~(50 / 60 Hz)						
Allowable load voltage range	48 - 528 VACrms~ (50 / 60 Hz)						
Rated load current ⁰¹⁾	Resistive load (AC-1) ⁰²⁾	10 Arms	15 Arms	20 Arms	30 Arms	40 Arms	60 Arms
Min. load current	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms	0.5 Arms
Max. 1 cycle surge current (60 Hz)	250 A	250 A	250 A	800 A	800 A	1,000 A	
Max. non-repetitive surge current (I ² t, t = 8.3 ms)	340 A ² s	340 A ² s	340 A ² s	3,000 A ² s	3,000 A ² s	4,000 A ² s	
Peak voltage (non-repetitive)	1,200 V (Zero cross turn-on), 1,000 V (Random turn-on)						
Leakage current (Ta = 25 °C)	≤ 10 mArms (480 VAC~/60 Hz)						
Output ON voltage drop [Vpk] (max. load current)	≤ 1.6 V						
Static off state dv/dt	500 V/μs						

01) Based on ambient temperature of 25°C

02) AC-1 is utilization category at IEC60947-4-3.

■ General specifications







Dielectric strength	Between the live part and the case : 2,500 VAC~ 50 / 60 Hz for 1 min
Insulation resistance	Input-output, input/output-case : ≥ 100 MΩ (500 VDC≡ megger)
Indicator	Input indicator (green)
Vibration	0.75 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 1 hour
Vibration (malfunction)	0.5 mm double amplitude at frequency of 10 to 55 Hz in each X, Y, Z direction for 10 min
Shock	300 m/s ² (≈ 30 G) in each X, Y, Z direction for 3 times
Shock (malfunction)	100 m/s ² (≈ 10 G) in each X, Y, Z direction for 3 times
Ambient temperature ⁰¹⁾	-30 to 80 °C (in case of the rated input voltage 90 - 240 VAC~ : -20 to 70 °C), storage: -30 to 100 °C (no freezing or no condensation)
Ambient humidity	45 to 85 %RH, storage: 45 to 85 %RH (no freezing or no condensation)
Input terminal connection	≥ 1×0.5 mm ² (1×AWG 20), ≤ 1×1.5 mm ² (1×AWG 16) or ≤ 2×1.5 mm ² (2×AWG 16)
Output terminal connection ⁰²⁾	Rated load current 10 / 15 / 20 A : ≥ 1×0.75 mm ² (1×AWG 18), ≤ 1×4 mm ² (1×AWG 12) or ≤ 2×2.5 mm ² (2×AWG 14) Rated load current 30 / 40 / 60 A : ≥ 1×1.5 mm ² (1×AWG 16), ≤ 1×16 mm ² (1×AWG 6) or ≤ 2×6 mm ² (2×AWG 10)
Input terminal	M3.5 (Fixed torque 0.75 to 0.96 N m)
Output terminal	Rated load current 10 / 15 / 20 A : M4 (Fixed torque 1.0 to 1.35 N m) Rated load current 30 / 40 / 60 A : M5 (Fixed torque 1.6 to 2.2 N m)
EMS	EN61000-6-2 compliance
EMI	EN61000-6-4 compliance
Certification	CE, RoHS, REACH
Weight (packaged)	Rated load current 10 / 15 / 20 A: ≈ 200 g (≈ 260 g) Rated load current 30 / 40 A: ≈ 390 g (≈ 480 g) Rated load current 60 A: ≈ 660 g (≈ 810 g)

01) See the ‘SSR Derating Curve’ in the product manual because the capacity of the rated load current is differ depending on the ambient temperature.
02) Connect the wire met the capacity of the load current to the output terminal.




Dimensions

- Unit: mm, For the detailed drawings, follow the Autonics website.
- When installing to the panel, tightening the screw with a torque of 1.8 to 2.5 N m.

■ Rated load current 10 / 15 / 20 A

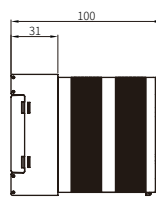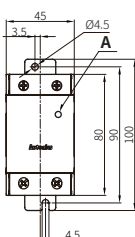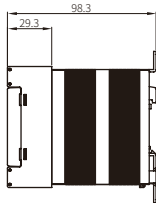



■ Rated load current 60 A

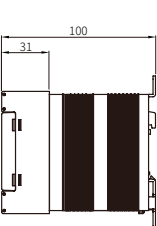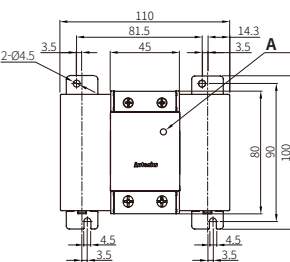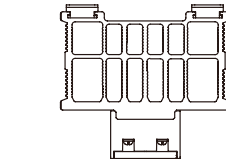

■ Mounting hole

- Rated load current 10 / 15 / 20 / 30 / 40 A
- Rated load current 60 A

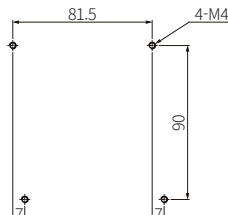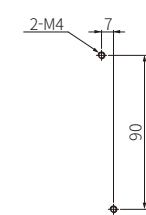

Connections

- Connect a CAP (capacitor) to the output terminal to meet EMC standards.
- Rated load voltage 24 - 240 VAC~: 1uF / 250 VAC~
- Rated load voltage 48 - 480 VAC~: 0.47uF / 500 VAC~

